

# No-Ha Collection

[www.No-Ha.com](http://www.No-Ha.com)

Installation pictures

# No-Ha 2.0 mini

Nm 938 & Nm 937  
Cartel/Locco



1




- Standard tool
- Depth: 130.5 mm
- Width: 20 mm

2






- Standard tool - Ø 8 mm


3

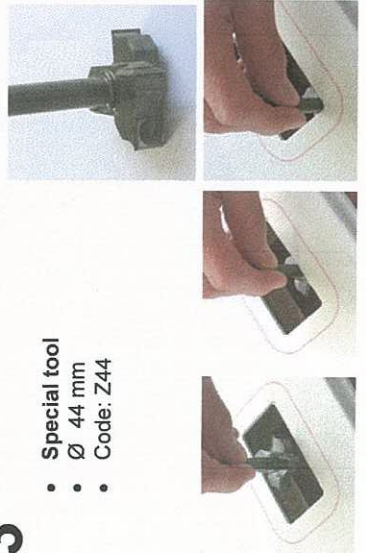


- Special tool
- Ø 44 mm
- Code: Z44

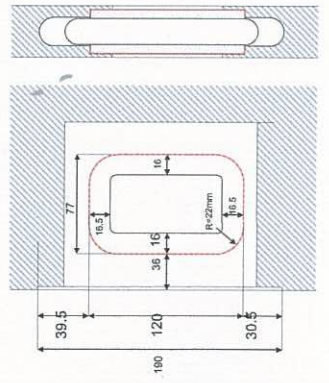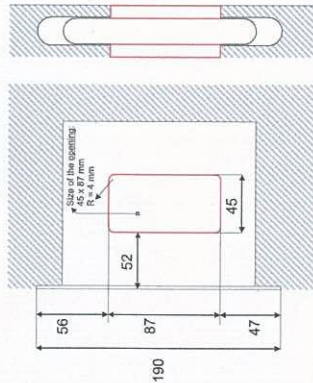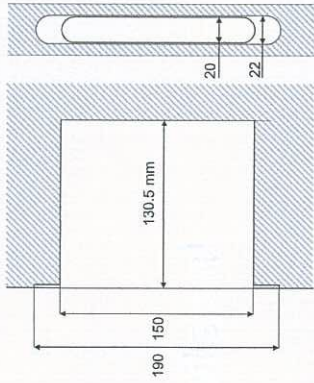

4

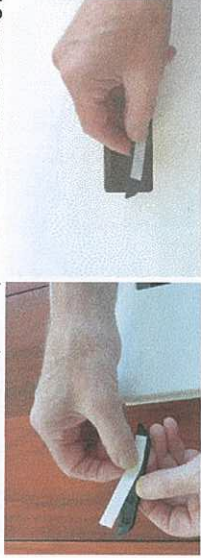

Insert 2 black plastic pieces and fixed them strongly with the white adhesive tape in kit..

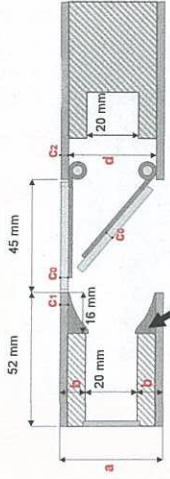

5



Prepare the lock: Glue the black sticker to the bottom in the showed way.

- No function
- Only aesthetical when you look inside the door.

6



Insert the lock in the door and fix the lock in the front with 2 screws. Test the lock

7



After testing the lock install the finished coverplates.